


MXC/GXC Smart-Tactors

CAN-Bus Contactor Series

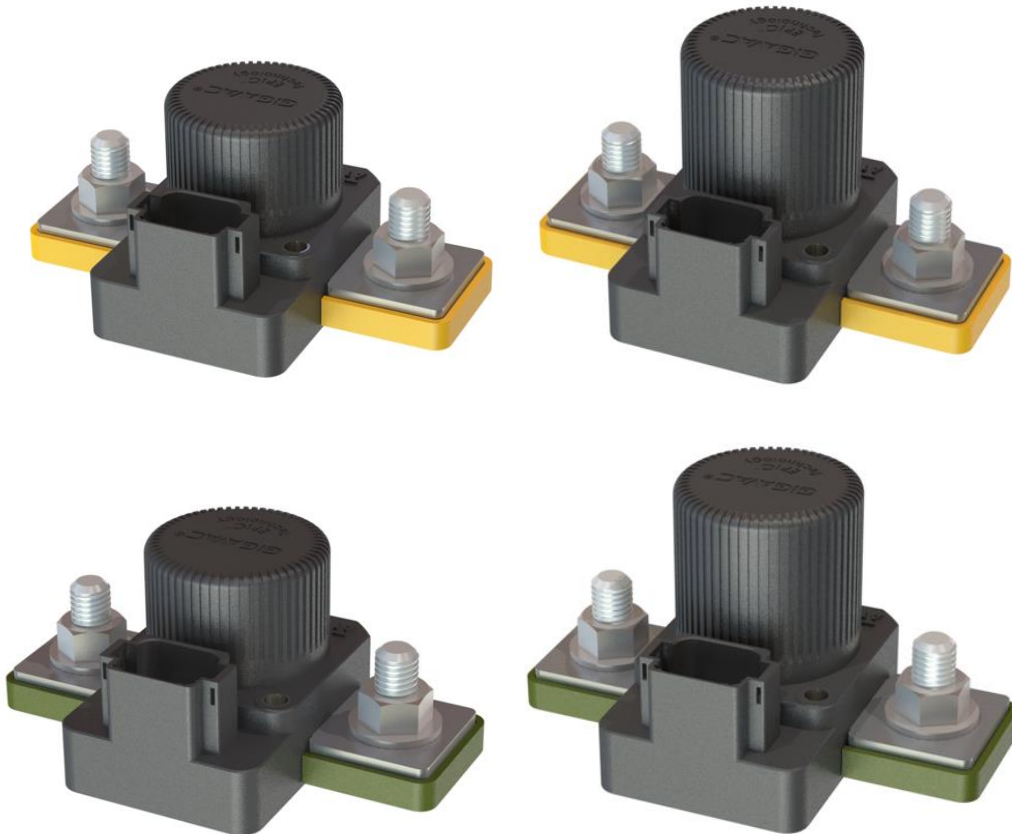

USER MANUAL

Message Summary

Priority	EDP/DP	PDU-F	Destination PDU-S (DA)	Source Address	Byte 7	Byte 6	Byte 5	Byte 4	Byte 3	Byte 2	Byte 1	Byte 0
----------	--------	-------	------------------------	----------------	--------	--------	--------	--------	--------	--------	--------	--------

COMMANDS

Contactor Command

6	00	177	this unit	user unit	-	-	-	-	-	-	-	Control (bits)
---	----	-----	-----------	-----------	---	---	---	---	---	---	---	----------------

SETTINGS

Trip Current Setting

6	00	178	this unit	user unit	-	-	Overcurrent Trip High		Overcurrent Trip Mid		Overcurrent Trip Low	
---	----	-----	-----------	-----------	---	---	-----------------------	--	----------------------	--	----------------------	--

Trip Time Setting

6	00	179	this unit	user unit	Off Delay Period		Overcurrent Trip Delay Time High		Overcurrent Trip Delay Time Mid		Overcurrent Trip Delay Time Low	
---	----	-----	-----------	-----------	------------------	--	----------------------------------	--	---------------------------------	--	---------------------------------	--

Misc. Settings

6	00	180	this unit	user unit	-	Settings (bits)	Baud Rate	Report Period	Low Coil Voltage shutoff		Over Voltage Protection Limit	
---	----	-----	-----------	-----------	---	-----------------	-----------	---------------	--------------------------	--	-------------------------------	--

REPORTS

Status Report 1

7	00	181	255	this unit	Countdown to Trip Timer		Status (bits)	Ctrl Voltage		Temperature	Current	
---	----	-----	-----	-----------	-------------------------	--	---------------	--------------	--	-------------	---------	--

Status Report 2

7	00	182	255	this unit	-	Total Cycle count			Terminal A1- Voltage		Terminal A2+ Voltage	
---	----	-----	-----	-----------	---	-------------------	--	--	----------------------	--	----------------------	--

Status Report 3

7	00	183	255	this unit	Over Voltage Trip Count		Low Voltage Trip Count		Hardware version		Firmware version	
---	----	-----	-----	-----------	-------------------------	--	------------------------	--	------------------	--	------------------	--

Status Report 4

7	00	184	255	this unit	-	-	Overcurrent Trip High		Overcurrent Trip Mid		Overcurrent Trip Low	
---	----	-----	-----	-----------	---	---	-----------------------	--	----------------------	--	----------------------	--

Status Report 5

7	00	185	255	this unit	Off Delay Period		Overcurrent Trip Delay Time High		Overcurrent Trip Delay Time Mid		Overcurrent Trip Delay Time Low	
---	----	-----	-----	-----------	------------------	--	----------------------------------	--	---------------------------------	--	---------------------------------	--

Status Report 6

7	00	186	255	this unit	-	Settings (bits)	Baud Rate	Report Period	Low Coil Voltage shutoff		Over Voltage Protection Limit	
---	----	-----	-----	-----------	---	-----------------	-----------	---------------	--------------------------	--	-------------------------------	--

Status Report 7

7	00	187	255	this unit	Minimum Voltage		Peak Voltage		Peak Current Negative		Peak Current Positive	
---	----	-----	-----	-----------	-----------------	--	--------------	--	-----------------------	--	-----------------------	--

Status Report 8

7	00	188	255	this unit	Min. Temp.	Max Temp.	Current Trip High Counts		Current Trip Mid Counts		Current Trip Low Counts	
---	----	-----	-----	-----------	------------	-----------	--------------------------	--	-------------------------	--	-------------------------	--

Command: Contactor Command

Priority	EDP/DP	PDU-F	Destination PDU-S (DA)	Source Address	Byte 7	Byte 6	Byte 5	Byte 4	Byte 3	Byte 2	Byte 1	Byte 0
6	00	177	this unit	user unit	-	-	-	-	-	-	-	Control

Byte 0 – Control bits

Bit 0 1 = Set contactor closed
 Bit 1 – Bit 7 Un-implemented. Set to 0.
 Byte 1 – Byte 7 Un-implemented. Set to 0.

Setting: Trip Current Setting

Priority	EDP/DP	PDU-F	Destination PDU-S (DA)	Source Address	Byte 7	Byte 6	Byte 5	Byte 4	Byte 3	Byte 2	Byte 1	Byte 0
6	00	178	this unit	user unit	-	-	Overcurrent Trip High		Overcurrent Trip Mid		Overcurrent Trip Low	

Byte 0/1 – Overcurrent Trip Low

Function: Sets the lowest current (absolute value) trip point. Uses “Overcurrent Trip Delay Time Low” for timing

Unused = 0

Default setting = 0

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Set value * factor) - offset
Overcurrent Trip Low	-32768 to 32767	16 Bits	1	Amps	0	Signed	Set Value = $1 (1 \times 1) - 0 = 1$ Amp Set Value = $-1: (-1 \times 1) - 0 = -1$ Amp

Byte 2/3 – Overcurrent Trip Mid

Function: Sets the middle current (absolute value) trip point. Uses “Overcurrent Trip Delay Time Mid” for timing

Value less than Overcurrent Trip Low = Defaults to Overcurrent Trip Low

Default setting = 0

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Set value * factor) - offset
Overcurrent Trip Mid	-32768 to 32767	16 Bits	1	Amps	0	Signed	Set Value = $1 (1 \times 1) - 0 = 1$ Amp Set Value = $-1: (-1 \times 1) - 0 = -1$ Amp

Byte 4/5 – Overcurrent Trip High

Function: Sets the High current (absolute value) trip point. Uses “Overcurrent Trip Delay Time High” for timing

Value less than Overcurrent Trip Mid = Defaults to Overcurrent Trip Mid

Default setting = 0

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Set value * factor) - offset
Overcurrent Trip High	-32768 to 32767	16 Bits	1	Amps	0	Signed	Set Value = $1 (1 \times 1) - 0 = 1$ Amp Set Value = $-1: (-1 \times 1) - 0 = -1$ Amp

Byte 6 – Byte 7 Un-implemented. Set to 0.

Setting: Trip Time Setting

Priority	EDP/DP	PDU-F	Destination PDU-S (DA)	Source Address	Byte 7	Byte 6	Byte 5	Byte 4	Byte 3	Byte 2	Byte 1	Byte 0
6	00	179	this unit	user unit	Off Delay Period		Overcurrent Trip Delay Time High		Overcurrent Trip Delay Time Mid		Overcurrent Trip Delay Time Low	

Byte 0/1 – Overcurrent Trip Delay Time Low

Function: Sets the time required for low current threshold to be exceeded until trip occurs

Immediate = 0

Default setting = 0

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Set value * factor) - offset
Overcurrent Delay Time Low	0.1 – 6553.5	16 Bits	0.1	Seconds	0	Unsigned	Set Value = 5 (5 x 0.1) - 0 = 0.5 Seconds Set Value = 1000: (1000 x 0.1) - 0 = 100 Seconds

Byte 2/3 – Overcurrent Trip Delay Time Mid

Function: Sets the time required for mid current threshold to be exceeded until trip occurs

Immediate = 0

Default setting = 0

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Set value * factor) - offset
Overcurrent Delay Time Mid	0.1 – 6553.5	16 Bits	0.1	Seconds	0	Unsigned	Set Value = 5 (5 x 0.1) - 0 = 0.5 Seconds Set Value = 1000: (1000 x 0.1) - 0 = 100 Seconds

Byte 4/5 – Overcurrent Trip Delay Time High

Function: Sets the time required for high current threshold to be exceeded until trip occurs

Immediate = 0

Default setting = 0

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Set value * factor) - offset
Overcurrent Delay Time High	0.1 – 6553.5	16 Bits	0.1	Seconds	0	Unsigned	Set Value = 5 (5 x 0.1) - 0 = 0.5 Seconds Set Value = 1000: (1000 x 0.1) - 0 = 100 Seconds

Byte 6/7 – Off Delay Period

Function: Sets the period for contacts to stay closed until next contactor close command

Unused = 0

Default setting = 0

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Set value * factor) - offset
Off Delay Period	1 – 65535	16 Bits	0.1	Seconds	0	Unsigned	Set Value = 5 (5 x 0.1) - 0 = 0.5 Seconds Set Value = 1000: (1000 x 0.1) - 0 = 100 Seconds

Setting: Miscellaneous Settings

Priority	EDP/DP	PDU-F	Destination PDU-S (DA)	Source Address	Byte 7	Byte 6	Byte 5	Byte 4	Byte 3	Byte 2	Byte 1	Byte 0
6	00	180	this unit	user unit	-	Settings (bits)	Baud Rate	Report Period	Low Coil Voltage shutoff		Over Voltage Protection Limit	

Byte 0/1 – Over Voltage Protection Limit

Function: Sets the contactor voltage high trip point. Contact exceeding this voltage immediately opens contact.

Unused = 0

Default setting = 0

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Set value * factor) - offset
Over Voltage Protection Limit	0.1– 6553.5	16 Bits	0.1	Volts	0	Unsigned	Set Value = $5 (5 \times 0.1) - 0 = 0.5$ Volts Set Value = $1000: (1000 \times 0.1) - 0 = 100$ Volts

Byte 2/3 – Low Coil Voltage shutoff

Function: “Battery Saver” Sets the coil voltage trip point. Coil less than this voltage immediately opens contact.

Unused = 0

Default setting = 0

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Set value * factor) - offset
Low Coil Voltage Shutoff	0.1– 6553.5	16 Bits	0.1	Volts	0	Unsigned	Set Value = $5 (5 \times 0.1) - 0 = 0.5$ Volts Set Value = $1000: (1000 \times 0.1) - 0 = 100$ Volts

Byte 4 – Report Period

Function: Defines the message repetition rate at which reports 1 through 8 are sent

0 – turns off reports being sent

Default setting = 100 (10 Seconds)

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Set value * factor) - offset
Report Period	0.1– 25.5	8 Bits	0.1	Seconds	0	Unsigned	Set Value = $5 (5 \times 0.1) - 0 = 0.5$ Seconds Set Value = $250: (250 \times 0.1) - 0 = 25$ Seconds

Byte 5 – Baud Rate

Function: Defines the CAN bus data rate. 250Kbits / second and 500Kbits / second are standard

Note: Not all values are supported

Default setting = 25

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Set value * factor) - offset
Baud Rate	250 – 500	8 Bits	10	K Baud	0	Unsigned	Set Value = 25 (25 x 10) - 0 = 250 K baud Set Value = 50: (50 x 10) - 0 = 500 K baud

Byte 6 – Settings (bits)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
.	Delay Timer Used	Power up State

Bit 0 Power up State

- 1 = Closed on power up
- 0 = Open on power up (default)

Bit 1 Delay Timer Used

- 0 = No delay used
- 1 = Use delay on break (after issue of open command)

Bits 2 – 7 Un-implemented. Set to 0.

Byte 7 Un-implemented. Set to 0.

Report: Status Report 1

Priority	EDP/DP	PDU-F	Destination PDU-S (DA)	Source Address	Byte 7	Byte 6	Byte 5	Byte 4	Byte 3	Byte 2	Byte 1	Byte 0
7	00	181	255	this unit	Countdown to Trip Timer		Status (bits)	Ctrl Voltage		Temperature	Current	

Byte 0/1 – Current

Function: reports the most recent value of current measured across the contactor

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Current	-32768 to 32767	16 Bits	1	Amps	0	Signed	Return Value = $1 (1 \times 1) - 0 = 1$ Amp Return Value = $-1: (-1 \times 1) - 0 = -1$ Amp

Byte 2 – Temperature

Function: reports the most recent temperature value measured inside the contactor

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Temperature	-40 to 215	8 Bits	1	Deg C	-40	UnSigned	Return Value = $0 (1 \times 1) - 40 = -40$ C° Return Value = $250: (250 \times 1) - 40 = 210$ C°

Byte 3/4 – Control Voltage

Function: Reports the most recent control (coil) value measured

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Control Voltage	0.1– 6553.5	16 Bits	0.1	Volts	0	UnSigned	Return Value = $5 (5 \times 0.1) - 0 = 0.5$ Volts Return Value = $1000: (1000 \times 0.1) - 0 = 100$ Volts

Byte 5 – Status (bits)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Current Fault	Delay Trip	Over Voltage Trip	UnderVoltage Trip	Current Trip Bit High	Current Trip Mid	Current Trip Lo	Contactors State

Bit 7

Current Fault

1 = Current measured when contact open (possible weld)

0 = Normal

Bit 6

Delay Trip

1 = Most recent trip was due to delay timer running out

0 = No Delay Trip occurred

Bit 5

Over Voltage Trip

1 = Most recent trip was due to an over voltage condition on main terminals

0 = No Over voltage Trip occurred

Bit 4

Under Voltage Trip

1 = Most recent trip was due to an under voltage condition on the control power

0 = No Delay Trip occurred

Bit 3

Current Trip Bit High

1 = Most recent trip was due to High Current set point exceeded

- Bit 2** **Current Trip Bit Mid**
 0 = No High Current set point exceeded
 1 = Most recent trip was due to High Current set point exceeded
- Bit 1** **Current Trip Bit Low**
 0 = No Mid Current set point exceeded
 1 = Most recent trip was due to High Current set point exceeded
- Bit 0** **Contactors State**
 1 = Contacts currently closed
 0 = Contacts currently open

Byte 6/7 – Countdown to Trip

Function: Reports (shortest) of any trip timer value currently running down

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Countdown to Trip	0 – 65535	16 Bits	0.1	Seconds	0	Unsigned	Return Value = 5 (5 x 0.1) - 0 = 0.5 Seconds Return Value = 1000: (1000 x 0.1) - 0 = 100 Seconds

Report: Status Report 2

Priority	EDP/DP	PDU-F	Destination PDU-S (DA)	Source Address	Byte 7	Byte 6	Byte 5	Byte 4	Byte 3	Byte 2	Byte 1	Byte 0
7	00	182	255	this unit	-	Total Cycle count			Terminal A1- Voltage		Terminal A2+ Voltage	

Byte 0/1 – Terminal A2+ Voltage

Function: Reports the most recent Terminal A2+ value measured

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Terminal A2+ Voltage	0.1– 6553.5	16 Bits	0.1	Volts	0	Unsigned	Return Value = 5 (5 x 0.1) - 0 = 0.5 Volts Return Value = 1000: (1000 x 0.1) - 0 = 100 Volts

Byte 2/3 – Terminal A1- Voltage

Function: Reports the most recent Terminal A1- value measured

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Terminal A1- Voltage	0.1– 6553.5	16 Bits	0.1	Volts	0	Unsigned	Return Value = 5 (5 x 0.1) - 0 = 0.5 Volts Return Value = 1000: (1000 x 0.1) - 0 = 100 Volts

Byte 4/5/6 – Total Cycle count

Function: Reports total number of times contactor has been cycled

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Total Cycle Count	1 – 16,777,215	24 Bits	1	Cycles	0	Unsigned	Return Value = 5 (5 x 1) - 0 = 5 Cycles Return Value = 1000: (1000 x 1) - 0 = 1000 Cycles

Byte 7 – Un-implemented. Read 0

Report: Status Report 3

Priority	EDP/DP	PDU-F	Destination PDU-S (DA)	Source Address	Byte 7	Byte 6	Byte 5	Byte 4	Byte 3	Byte 2	Byte 1	Byte 0
7	00	183	255	this unit	Over Voltage Trip Count		Low Voltage Trip count		Hardware version		Firmware version	

Byte 0/1 – Firmware Version

Function: Reports the firmware version (Major.Minor)

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Firmware Version	1.01 - 99.99	16 Bits	0.01	Major.Minor	0	Unsigned	Return Value = 208 (208 x 0.01) - 0 = ver. 2.08 Return Value = 1001: (1001 x 0.01) - 0 = ver.10.01

Byte 2/3 – Hardware Version

Function: Reports the Hardware version (Major.Minor)

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Hardware Version	1.01 - 99.99	16 Bits	0.01	Major.Minor	0	Unsigned	Return Value = 208 (208 x 0.01) - 0 = ver.2.08 Return Value = 1001: (1001 x 0.01) - 0 = ver.10.01

Byte 4/5 – Low Voltage Trip count

Function: Returns the number of low coil voltage trip occurrences.

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Low Voltage Trip Count	0– 65535	16 Bits	1	Counts	0	Unsigned	Return Value = 5 (5 x 1) - 0 = 5 Counts Return Value = 1000: (1000 x 1) - 0 = 1000 Counts

Byte 6/7 – Over Voltage Trip count

Function: Returns the number of Over Voltage Trip occurrences.

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Over Voltage Trip count	1 – 65535	16 Bits	1	Counts	0	Unsigned	Return Value = 5 (5 x 1) - 0 = 5 Counts Return Value = 1000: (1000 x 1) - 0 = 1000 Counts

Report: Status Report 4

Priority	EDP/DP	PDU-F	Destination PDU-S (DA)	Source Address	Byte 7	Byte 6	Byte 5	Byte 4	Byte 3	Byte 2	Byte 1	Byte 0
7	00	184	255	this unit	-	-	Overcurrent Trip High		Overcurrent Trip Mid		Overcurrent Trip Low	

Byte 0/1 – Overcurrent Trip Low

Function: Returns the lowest current trip point setting.

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Overcurrent Trip Low	-32768 to 32767	16 Bits	1	Amps	0	Signed	Return Value = $1 (1 \times 1) - 0 = 1$ Amp Return Value = $-1: (-1 \times 1) - 0 = -1$ Amp

Byte 2/3 – Overcurrent Trip Mid

Function: Returns the mid current trip point setting.

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Overcurrent Trip Mid	-32768 to 32767	16 Bits	1	Amps	0	Signed	Return Value = $1 (1 \times 1) - 0 = 1$ Amp Return Value = $-1: (-1 \times 1) - 0 = -1$ Amp

Byte 4/5 – Overcurrent Trip High

Function: Returns the high current trip point setting.

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Overcurrent Trip High	-32768 to 32767	16 Bits	1	Amps	0	Signed	Return Value = $1 (1 \times 1) - 0 = 1$ Amp Return Value = $-1: (-1 \times 1) - 0 = -1$ Amp

Byte 6 – Byte 7 Un-implemented. Read 0

Report: Status Report 5

Priority	EDP/DP	PDU-F	Destination PDU-S (DA)	Source Address	Byte 7	Byte 6	Byte 5	Byte 4	Byte 3	Byte 2	Byte 1	Byte 0
7	00	185	255	this unit	Off Delay Period		Overcurrent Trip Delay Time High		Overcurrent Trip Delay Time Mid		Overcurrent Trip Delay Time Low	

Byte 0/1 – Overcurrent Trip Delay Time Low

Function: Returns the lowest Overcurrent Delay Time setting

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Overcurrent Delay Time Low	0.1 – 6553.5	16 Bits	0.1	Seconds	0	Unsigned	Return Value = $5 (5 \times 0.1) - 0 = 0.5$ Seconds Return Value = $1000: (1000 \times 0.1) - 0 = 100$ Seconds

Byte 2/3 – Overcurrent Trip Delay Time Mid

Function: Returns the mid Overcurrent Delay Time setting

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Overcurrent Delay Time Mid	0.1 – 6553.5	16 Bits	0.1	Seconds	0	Unsigned	Return Value = $5 (5 \times 0.1) - 0 = 0.5$ Seconds Return Value = $1000: (1000 \times 0.1) - 0 = 100$ Seconds

Byte 4/5 – Overcurrent Trip Delay Time High

Function: Returns the high Overcurrent Delay Time setting

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Overcurrent Delay Time High	0.1 – 6553.5	16 Bits	0.1	Seconds	0	Unsigned	Return Value = $5 (5 \times 0.1) - 0 = 0.5$ Seconds Return Value = $1000: (1000 \times 0.1) - 0 = 100$ Seconds

Byte 6/7 – Off Delay Period

Function: Returns the off delay period setting

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Off Delay Period	1 – 65535	16 Bits	0.1	Seconds	0	Unsigned	Return Value = $5 (5 \times 0.1) - 0 = 0.5$ Sec Return Value = $1000: (1000 \times 0.1) - 0 = 100$ Sec

Report: Status Report 6

Priority	EDP/DP	PDU-F	Destination PDU-S (DA)	Source Address	Byte 7	Byte 6	Byte 5	Byte 4	Byte 3	Byte 2	Byte 1	Byte 0
7	00	186	255	this unit	-	Settings (Bits)	Baud Rate	Report Period	Low Coil Voltage shutoff	Over Voltage Protection Limit		

Byte 0/1 – Over Voltage Protection Limit

Function: Returns the contactor voltage high trip point setting.

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Over Voltage Protection Limit	0.1– 6553.5	16 Bits	0.1	Volts	0	Unsigned	Return Value = 5 (5 x 0.1) - 0 = 0.5 Volts Return Value = 1000: (1000 x 0.1) - 0 = 100 Volts

Byte 2/3 – Low Coil Voltage shutoff

Function: Returns the coil voltage trip point setting.

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Low Coil Voltage Shutoff	0.1– 6553.5	16 Bits	0.1	Volts	0	Unsigned	Return Value = 5 (5 x 0.1) - 0 = 0.5 Volts Return Value = 1000: (1000 x 0.1) - 0 = 100 Volts

Byte 4 – Report Period

Function: Returns the “Heartbeat” rate at which reports 1 through 8 are sent

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Report Period	0.1– 25.5	8 Bits	0.1	Seconds	0	Unsigned	Return Value = 5 (5 x 0.1) - 0 = 0.5 Seconds Return Value = 250: (250 x 0.1) - 0 = 25 Seconds

Byte 5 – Baud Rate

Function: Returns the CAN bus data rate. 250Kbits / second and 500Kbits / second are standard

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Baud Rate	250 – 500	8 Bits	10	K Baud	0	Unsigned	Return Value = 25 (25 x 10) - 0 = 250 K baud Return Value = 50: (50 x 10) - 0 = 500 K baud

Byte 6 – Settings (bits)

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
.	Power up State

Bit 0 Power up State

1 = Closed on power up

0 = Open on power up (default)

Bits 1 – 7 Un-implemented. Set to 0.

Byte 7 – Un-implemented. Read 0

Report: Status Report 7

Priority	EDP/DP	PDU-F	Destination PDU-S (DA)	Source Address	Byte 7	Byte 6	Byte 5	Byte 4	Byte 3	Byte 2	Byte 1	Byte 0
7	00	187	255	this unit	Minimum Voltage		Peak Voltage		Peak Current Negative		Peak Current Positive	

Byte 0/1 – Peak Current Positive

Function: Returns the historically highest positive current measured through the device

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Peak current Positive	0 to 32767	16 Bits	1	Amps	0	Unsigned	Return Value = $1 (1 \times 1) - 0 = 1$ Amp Return Value = 1000: $(1000 \times 1) - 0 = 1000$ Amp

Byte 2/3 – Peak Current Negative

Function: Returns the historically highest negative current measured through the device (absolute value)

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Peak current Negative	0 to 32767	16 Bits	-1	Amps	0	Unsigned	Return Value = $1 (1 \times -1) - 0 = -1$ Amp Return Value = 1000: $(1000 \times -1) - 0 = -1000$ Amp

Byte 4/5 – Peak Voltage

Function: Returns historically highest terminal voltage.

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Peak Voltage	0.1– 6553.5	16 Bits	0.1	Volts	0	Unsigned	Return Value = $5 (5 \times 0.1) - 0 = 0.5$ Volts Return Value = 1000: $(1000 \times 0.1) - 0 = 100$ Volts

Byte 6/7 – Minimum Voltage

Function: Returns historically lowest terminal voltage.

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Minimum Voltage	0.1– 6553.5	16 Bits	0.1	Volts	0	Unsigned	Return Value = $5 (5 \times 0.1) - 0 = 0.5$ Volts Return Value = 1000: $(1000 \times 0.1) - 0 = 100$ Volts

Report: Status Report 8

Priority	EDP/DP	PDU-F	Destination PDU-S (DA)	Source Address	Byte 7	Byte 6	Byte 5	Byte 4	Byte 3	Byte 2	Byte 1	Byte 0
7	00	188	255	this unit	Min. Temp.	Max Temp.	Current Trip High Counts		Current Trip Mid Counts		Current Trip Low Counts	

Byte 0/1 – Current Trip Low Counts

Function: Returns the number of occurrences of tripping the Low current setpoint

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Current Trip Low Counts	0–65535	16 Bits	1	Counts	0	Unsigned	Return Value = 5 (5 x 1) - 0 = 5 Counts Return Value = 1000: (1000 x 1) - 0 = 1000 Counts

Byte 2/3 – Current Trip Mid Counts

Function: Returns the number of occurrences of tripping the Mid current setpoint

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Current Trip Mid Counts	0–65535	16 Bits	1	Counts	0	Unsigned	Return Value = 5 (5 x 1) - 0 = 5 Counts Return Value = 1000: (1000 x 1) - 0 = 1000 Counts

Byte 4/5 – Current Trip High Counts

Function: Returns the number of occurrences of tripping the High current setpoint

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Current Trip High Counts	0–65535	16 Bits	1	Counts	0	Unsigned	Return Value = 5 (5 x 1) - 0 = 5 Counts Return Value = 1000: (1000 x 1) - 0 = 1000 Counts

Byte 6 – Max. Temperature

Function: reports the historically highest temperature value measured inside the contactor

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Max Temperature	-40 to 215	8 Bits	1	Deg C	-40	Unsigned	Return Value = 0 (1 x 1) - 40 = -40 C° Return Value = 250: (250 x 1) - 40 = 210 C°

Byte 7 – Min. Temperature

Function: reports the historically lowest temperature value measured inside the contactor

Signal Name	Value Range	Bit Length	Factor	Unit	Offset	Signed?	Example: (Return value * factor) - offset
Min Temperature	-40 to 215	8 Bits	1	Deg C	-40	Unsigned	Return Value = 0 (1 x 1) - 40 = -40 C° Return Value = 250: (250 x 1) - 40 = 210 C°

REVISION HISTORY

Table 0.1: Document Revision History

Release No.	Date	Revision Description
---	11-Oct-21	First Release; G.Lyons

Sensata Technologies, Inc. ("Sensata") data sheets are solely intended to assist designers ("Buyers") who are developing systems that incorporate Sensata products (also referred to herein as "components"). Buyer understands and agrees that Buyer remains responsible for using its independent analysis, evaluation and judgment in designing Buyer's systems and products. Sensata data sheets have been created using standard laboratory conditions and engineering practices. Sensata has not conducted any testing other than that specifically described in the published documentation for a particular data sheet. Sensata may make corrections, enhancements, improvements and other changes to its data sheets or components without notice. Buyers are authorized to use Sensata data sheets with the Sensata component(s) identified in each particular data sheet. HOWEVER, NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER SENSATA INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY THIRD PARTY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT, IS GRANTED HEREIN. SENSATA DATA SHEETS ARE PROVIDED "AS IS". SENSATA MAKES NO WARRANTIES OR REPRESENTATIONS WITH REGARD TO THE DATA SHEETS OR USE OF THE DATA SHEETS, EXPRESS, IMPLIED OR STATUTORY, INCLUDING ACCURACY OR COMPLETENESS. SENSATA DISCLAIMS ANY WARRANTY OF TITLE AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET ENJOYMENT, QUIET POSSESSION, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS WITH REGARD TO SENSATA DATA SHEETS OR USE THEREOF.

All products are sold subject to Sensata's terms and conditions of sale supplied at www.sensata.com SENSATA ASSUMES NO LIABILITY FOR APPLICATIONS ASSISTANCE OR THE DESIGN OF BUYERS' PRODUCTS. BUYER ACKNOWLEDGES AND AGREES THAT IT IS SOLELY RESPONSIBLE FOR COMPLIANCE WITH ALL LEGAL, REGULATORY AND SAFETY-RELATED REQUIREMENTS CONCERNING ITS PRODUCTS, AND ANY USE OF SENSATA COMPONENTS IN ITS APPLICATIONS, NOTWITHSTANDING ANY APPLICATIONS-RELATED INFORMATION OR SUPPORT THAT MAY BE PROVIDED BY SENSATA. Mailing Address: Sensata Technologies, Inc., 529 Pleasant Street, Attleboro, MA 02703, USA.

Americas

Sensata GIGAVAC
 Contactor Center of Excellence
 6382 Rose Lane
 Carpinteria, CA 93013
 USA
 Tel: +1 (805) 684 8401
 Email: gigavac@sensata.com
 Sensata Global Headquarters
 Sensata Technologies
 529 Pleasant Street
 Attleboro, MA 02703
 USA

Europe, Middle East & Africa

Sensata Technologies Holland
 B.V.
 Jan Tinbergenstraat 80
 7559 SP Hengelo
 The Netherlands
 Tel: +31743578000

Asia Pacific

China
 Sensata Technologies China Co.,
 Ltd.
 BM Intercontinental Business
 Center
 30th Floor
 100 Yu Tong Road
 Shanghai 200070
 People's Republic of China
 Tel: +8621 2306 1500
 Email: contactorasia@list.sensata.com
 Japan
 Sensata Technologies Japan Ltd.
 Shin Yokohama Square Bldg. 7F
 2-3- 12 Shin-yokohama
 Kohoku-ku, Yokohama-shi,
 Kanagawa 222-0033
 Tel: +81 45 777 7001